


30-09-2018

BJ Sims Publishing

Product Catalogue

October 2018

www.vintagefarmbooks.com

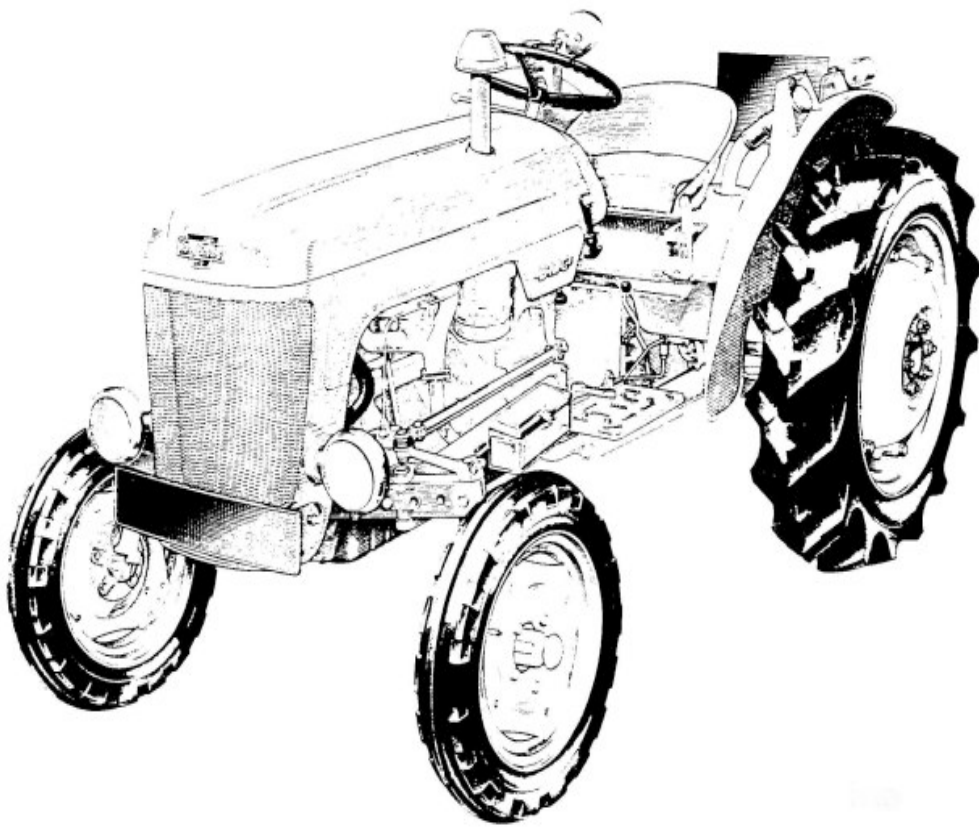

1 Hall Farm Cottages
Church Lane
Swarkestone
Derby
DE73 7GG
Telephone 01332 702717
Email enquiries@vintagefarmbooks.com

Closing Down

We have decided that this will be our last year of trading, unfortunately due to poor health we will not be taking our trade stand to any shows this year. We are therefore no longer selling our range of reproductions, we are however selling off our original manuals, instruction books etc. Please see this list for the books we have available, please do enquire for price and that we still have the item before ordering.

Thank you all for your trade over the last few decades, it has been fun and we have made many friends over the years.

All the best

Brian & Pauline Sims

Albion (see also David Brown)

No.3 Steel binder parts list and working instructions 1922 (AL001).....	POA
'Beacon' Tractor trailer mower parts list and working instructions (AL011).....	POA
8BT Tractor trailer mower parts list 1947 and working instructions (AL012).....	POA
No.5 Centre gear mower parts list 1929 (AL013).....	POA
16R Mower parts list 1939 and working instructions (AL014).....	POA
9L & 9R Oil-bath mowers parts list 1939 (AL016).....	POA
Albion corn drill parts list and working instructions 1941 (AL017).....	POA
No.3 Seed drill instructions & parts list (AL018).....	POA
Combined seed & fertiliser drill parts list and working instructions (AL025).....	POA
No.2 Combined seed & fertiliser drill parts list and working instructions (AL027).....	POA

Allis-Chalmers

Model B Tractor service sheet (SS001).....	POA
Model IB, B & C Tractors, B15 & 60H engines parts list 1947 (AC017).....	POA
Model C Tractor operating instructions & repair parts list (AC002).....	POA
Model D-272 Tractor instruction book (AC004).....	POA
P3/144 Diesel engine (as fitted to D-272) parts list (AC004B).....	POA
Model ED40 Tractor instruction book includes wiring diagram (with 'Depthomatic' control) (AC005).....	POA
Model ED40 Tractor instruction book includes wiring diagram (without 'Depthomatic' control) (AC005A).....	POA
Model ED40 Tractor parts list includes Depthomatic control (AC003).....	POA
Type 23C & OE138 4 cylinder Diesel engine (as fitted to Model ED40 tractor) parts list (AC006).....	POA
Model M Tractor instruction book (AC007).....	POA
Model M Tractor parts list (AC008).....	POA
Model WC Tractor operating & maintenance instructions & parts list (AC009).....	POA
Model WF Tractor instructions and parts list (AC026).....	POA
Model WC & WF Tractors & W-201 (W-25) engine parts list 1947 (AC009A).....	POA
All-Crop Drill model 157 instructions & parts list (AC020).....	POA
A.C. 715D 15 row G & F drill parts list (AC021).....	POA
Super A Model combine harvester instructions 1965 (AC010).....	POA
All-Crop 60 Combine harvester instructions & parts list (AC015).....	POA
Auxiliary engine for All-Crop 60 instructions & parts list (AC016).....	POA
Roto-Baler Instructions & parts list (AC022).....	POA
How to Run Your Roto-Baler (AC014).....	POA
How to Stack Your Rolled Bales (AC013).....	POA
Model B & C Mowing attachment instructions & parts list (AC018).....	POA
Model 200 Pick-up baler parts list (AC011).....	POA
Model 300 Pick-up baler instruction book 1966 (AC012).....	POA

Armstrong Siddeley

14-20 hp Diesel engine manual & spare parts list 1953 (AR001).....	POA
Single-cylinder 6-11hp & twin-cylinder 14-22hp Diesel engines maintenance manual & parts list (AR002).....	POA

ATCO

Lawn mower model A10 & B19 parts list (ACO001).....	POA
28" & 34" Motor mower parts list (ACO002).....	POA
14", 17" & 20" Motor mower Models Series 14172053 (ACO005).....	POA
17" (Model D10) & 20" (Model F18) Motor lawn mower parts list 1962/3 (ACO003).....	POA
12" (Model A12) & 14" (Model B23) Motor lawn mower parts list 1967/8 (ACO004).....	POA

Aveling Barford

'GC' Roller instructions (AV001).....	POA
---------------------------------------	-----

Bamfords

Instructions & spare parts list for 2-6 BHP petrol & paraffin horizontal engines 1930 (BA001).....	POA
Instructions & spare parts list for 6, 8 & 10 BHP Diesel engines (BA014A).....	POA
AC2 Twin-cylinder air cooled Diesel engine instructions book (BA007).....	POA
AC2 Twin-cylinder air cooled Diesel engine spare parts list (BA008).....	POA
AC3 Three-cylinder air cooled Diesel engine parts list (BA008A).....	POA
DD1, DD2 & DD3 Diesel engine instructions & spare parts list 1942 (BA009).....	POA
Instructions & spare parts list for petrol engines types EG & SG (Models EG1,2,3,4,5, EG1M & SG3) 1947 (BA002).....	POA
EG & EGK Series engines spare parts list 1952 (BA003).....	POA
Instructions & spare parts list for petrol engines types EV & SV (Models EV1,2,3,4, & 5, SV1,2, & 3) (BA005).....	POA
Instructions & spare parts list for Diesel engines SD1, SD2, SD3 & SD4 (with 2 push rods) 1946 (BA010).....	POA
Z Series single-cylinder Diesel engine spare parts list 1952 (BA013).....	POA
'Cheaper Power the Bamfords Way', Bamfords engine catalogue 1942 (BA049).....	POA
'Perfect' Root cutters & combined root cleaners & cutters parts list 1949 (BA016).....	POA
'Clipper' Chaff cutters spares list 1931 (BA018).....	POA
POA	
'Rapid' Grinding & crushing mills spare parts list 1937 (BA019).....	POA
'Rapid' Grinding mills spare parts list 1953 (BA051).....	POA
'Rapid' Roller crushing mills (no.s DBB & DC) parts list (BA053).....	POA
'Rapid' Hammer mills spare parts list 1948 (BA020).....	POA
A1 One horse Royal mower & reaper parts list 1942 (BA021).....	POA
A2 One horse mower parts list (BA021A).....	POA
'Royal' Mowers & reapers parts list 1903 (BA023).....	POA

5RA & 5LA 'Royal' mowers & reapers parts list 1946 (BA024).....	POA
7R 'Royal' Mower reaper models 7RT, 7RTA, 7RTB & 7RTW tractor trailer spares list 1949 (BA025).....	POA
7RTC & 7RTX Mowers (with or without power lift) spares list 1947 (BA026).....	POA
3R Three point linkage power drive mower instructions 1964 (BA028).....	POA
'Major' Power-driven mowers spare parts list 1958 (BA0054).....	POA
'Major' Mower instructions and parts list 1948 (BA0054A).....	POA
LS1 Mower instruction book (BA055A).....	POA
RM1 3-point, rear-mounted, power drive mower parts list (BA057).....	POA
Side rake, swath turner, tedder, haymaker & croploder tines parts list 1947 (BA040).....	POA
FGN2 Side rake & swath turner parts list 1955 (BA061).....	POA
'Lion' Horse rakes parts list 1955 (BA059).....	POA
'Lion' Back action kickers Mk. H5, H5W, H6 & H8 spares list 1947 (BA044).....	POA
R1 Gearless side rake & swath turner parts list 1956 (BA062).....	POA
R2 & RG2 Gearless side rake & swath turner parts list 1958 (BA063).....	POA
RS10 & RS11 Swath turners & windrowers instructions and parts list 1943 (BA030).....	POA
SC4 Swath turner, windrower, side rake & no.5 swath turner parts list (BA074).....	POA
SR1 & 2 Rear action combined side rakes, swath turners, tedders & windrowers parts list 1945 (BA029).....	POA
SR3 Side rake, swath turner & tedder parts list 1953 (BA064).....	POA
SRT5 Tractor side rake, swath turner & tedder parts list (BA075).....	POA
TSA 10 Tractor rake spares list 1950 (BA032).....	POA
'Universal' Crop loader spares price list 1949 (BA036).....	POA
CL1 & CL2 Universal croploder parts list (BA037A).....	POA
CL3 Universal croploder spares list 1952 (BA037).....	POA
HL1, HL4 & HL5 Hayloader spares list 1947 (BA038).....	POA
HL6 Hayloader spares list 1947 (BA039).....	POA
List of side rake, swath turner, tedder, haymaker and hayloader tines. (BA041).....	POA
BL30 Pick-up baler instructions book 1962 (BA077).....	POA
BL48 Pick-up baler instructions book 1962 (BA078).....	POA
BL50 Pick-up baler instructions book 1964 (BA033).....	POA
BL58 Pick-up baler instructions book 1967 (BA034).....	POA
BL58 Pick-up baler parts list (BA071).....	POA
BL60 Pick-up baler instructions book (BA035).....	POA
BL62 Pick-up baler instructions book 1962 (BA079).....	POA
FY1 Farmyard manure spreader parts list (BA046).....	POA
FY3 Farmyard manure spreader spare parts list 1957 (BA067).....	POA
FY4 Farmyard manure spreader parts list 1966 (BA076).....	POA
'Gloster' H1 & H1S Forage harvester parts list (BA072).....	POA
POA	
'Gloster' H2 & H2S Forage harvester parts list (BA073).....	POA
POA	
Nu-Drive Supreme No.s 9C, 10C, 11C & 12C instructions (BA067A).....	POA
Nu-Drive Supreme Manure spreader models 7A/B, 9A/B, 10A/B, 11A/B & 12A/B instructions & parts list (BA045).....	POA
Bamfords / Kvernelands 621 plough instructions book 1965 (BA042).....	POA
Bamfords / Kvernelands 621 plough parts list (BA042A).....	POA
Bamlett	
TM1 Self-lift trailer mower instructions & parts list (BLT002).....	POA
HT1 Mechanical lift trailer mower instructions & parts list (BLT003).....	POA
No.2 Easilift tractor trailer mower instructions & parts list (BLT004).....	POA
No.9 Double drive mower instructions & parts list (BLT005).....	POA
Barford	
Barford Atom 15 Tractor instructions and parts list (also covers implements) (BAR002).....	POA
Bentall	
Unchockable disc root cutter spare parts list (BEN003).....	POA
Service sheet covers Maxim BRC4 root cutter and BRC5 cleaner (BEN004).....	POA
Bernard – Moteurs	
Instruction book for engine types 19A, 39A, 139A, 239A, 29A, 49A, 249A with parts list (BER001).....	POA
Blake	
Double – acting piston pump installation and maintenance instructions (BLA001).....	POA
Bray	
Bray 4 - 10/60 Tractor Handbook (Supplement to the Nuffield 10/60 Handbook, see NU006) (BRY001).....	POA
Bristol	
Bristol '20' Operating instructions (BRI001).....	POA
Bristol '20' Service sheet (SS002).....	POA
British Lely	
'Anylevel' 20 Elevator instructions and parts list (BLY001).....	POA
British Motorboat Manufacturing & Brockhouse Engineering Ltd.	
Spryt' Engine Kickstart Mk.2 instructions and parts list (BRO001).....	POA
B.S.A.	
Model B 98cc parts list (BSA002).....	POA
Model D 220cc parts list (BSA003).....	POA

150cc S.V. parts list (BSA007).....	POA
Replacement parts list for 119cc (BSA008).....	POA
Case (Also see David Brown & International Sections)	
Model C tractor operators manual (CA005).....	POA
Model C tractor parts list (CA004).....	POA
Model CC tractor operators manual (CA003).....	POA
Model C & D tractor service sheet (SS003).....	POA
D Series tractor operators manual (CA002).....	POA
Model D Series tractor Live Power Take-off Eagle Hitch service manual (covers this equipment only, not tractor) (CA007)....	POA
LA Series tractor operators manual (CA001).....	POA
CAV	
Fuel injection equipment for agricultural machinery operators handbook (CAV001).....	POA
CA45C Co-axial type starter operators book (CAV002).....	POA
CA45D Co-axial type starter operators book (CAV003).....	POA
D.C. Generators instruction book (CAV005).....	POA
Regulators and cut-outs instruction book (CAV006).....	POA
Fuel injection pumps, flange mounted type, models BPF instruction book (CAV014).....	POA
Fuel injection pump type DPA 1964 (CAV012).....	POA
Fuel injection nozzle and nozzle holder instruction book for models S, T, U and V (CAV008).....	POA
Fuel injection equipment type formulae (CAV009).....	POA
Nipple Forming tools operating instructions for models ET078 & ET091 (CAV013).....	POA
Pneumatic speed governor for fuel injection pump type BEP instruction book (CAV011).....	POA
Clayson	
Model 133 – 135 Combine Harvester service parts list (CLN001).....	POA
Model M89 Combine Harvester service parts list (CLN002).....	POA
Clifford	
The Clifford Rotary Cultivator Model A111 (A11 & B) instruction book (CLF001).....	POA
Cockshutt	
Horse & Tractor Ploughs parts list, 1922 (CKT001).....	POA
No.6 Tractor Plough operating instructions & parts list (CKT002).....	POA
County (see also individual manufacturers for modified models)	
Fordson Major Fulltrack County Tracklayer Service Sheet (SS037).....	POA
Coventry Climax	
Type ‘Z’ petrol engine, for 9KVA generating set, field manual (COV001).....	POA
Coventry Victor	
Neptune Engines models A/C AND W/C instructions (COR001).....	POA
Type ‘N’ Mk.2 instructions and parts list (COR002).....	POA
Crossley	
Oil and Gas engines sizes 1080 to 1095 instruction book and parts list (CRO001).....	POA
David Brown and David Brown Albion	
‘Aids to Cropmaster Farming’ Instructions for use of Cropmaster & associated DB attachments & equipment 1951(DB051)..	POA
VAK/1 and VAG/1 Tractor and equipment parts list (DB002A).....	POA
Cropmaster Model VAK1/C Service sheet (SS004).....	POA
Hydraulic Systems-Cropmaster & Super Cropmaster Service Sheet (SS044).....	POA
Tractor and Implement Operators Handbook, covers attachment & use of DB implements with 25, 25D, 30C & 30D tractors, also covers the Cropmaster (DB052).....	POA
DB 25 Information sheet (SS026).....	POA
DB 25 Series VAK/1C and VAG/1C instruction book with wiring diagram (DB002B).....	POA
DB 25 & 30C Service, Repair and Maintenance Manual (DB060).....	POA
DB 25D and 30D (series VAD/1C/25 and VAD/1D/30) Instruction book with wiring diagram (DB006B).....	POA
DB 30C (series VAK/30C and VAG/30C) operating and maintenance instruction book with wiring diagram(DB055).....	POA
DB 50D (Series VAD-6) Instructions Book with wiring diagram(DB063).....	POA
DB 2D Series VAD/12 Instruction book with list of parts with wiring diagram (DB003).....	POA
Trackmaster 50 Service and information sheet (SS005).....	POA
Trackmaster Service Sheet (SS041).....	POA
770 Selectamatic and 770 Selectamatic Livedrive instruction book (DB002BX).....	POA
885, 885G and 885 Narrow tractor instruction book with wiring diagram (DB008)	POA
900 Series VAD/1H/30, VAK/1H/30 and VAG/1H/30 tractors instruction book with wiring diagram (DB009).....	POA
900 Tractor spares list (not illustrated) (DB010).....	POA
900 and 900 Livedrive repair manual (supplement to 25 and 30C repair manual) (DB011).....	POA
900 & Livedrive (Series VAD/1J/30, VAK/1J/30, VAG/1J/30 & VAD/1L/30, VAK/1L/30, VAG/1L/30) Instructions with wiring diagram(DB066).....	POA
950 T and U Series tractor hydraulic and transmission system (DB012).....	POA
990 Implematic Tractor parts list (DB013A).....	POA
990 and 995/6 Tractor instruction book with wiring diagram (DB013B).....	POA
990, 990 4WD, 995, 996 & 996 4WD Tractors with QuietCab Operating & Maintenance Manual (Oct 1978) (DB030X).....	POA
1190 Tractor instruction book (DB013C).....	POA
1200 Selectamatic instruction book with wiring diagram (DB014).....	POA
1410 and 1412 Tractor instruction book with wiring diagram (DB014A).....	POA

4 Cylinder Diesel engine parts list, covers AD.4, AD.4.3, AD.4.25, CAD.4.30, SD.4, SD.4.3 with supplement for ADH/30H engine (DB016).....	POA
4 Cylinder Gasoline and kerosene engines parts list (DB016A).....	POA
Universal Cylinder Blocks & Engine Lubrication Systems Fitting Instructions (All Series DB Tractors) (DB067).....	POA
Diesel conversion kit installation and operating instructions for all wheeled models with AD4/25 engine (DB017).....	POA
DB Isolating valve U90C & U120C, U90D & U120D fitting instructions (DB036).....	POA
DB Agricultural lighting system U179 and universal lighting system U180 fitting instructions (DB020).....	POA
DB Traction control unit instruction book and parts list (DB021).....	POA
DB A Series plough instruction book (DB018).....	POA
DB CM3R and CW2R Reversible plough mounting and operating instructions (DB039).....	POA
DB Unit principle ploughs types PU1 – 5 instruction book (DB050).....	POA
DB Unit principle ploughs types PU1 – 5 parts list (DB043).....	POA
DB 2-3 Furrow Disc plough series PCD2F/26, PCD2T/26 and PCD3T/26 parts list (DB037).....	POA
DB 3-4 Furrow Disc ploughs (Series PCD3/C & PCD4/C) Instructions & parts list (serial no. 20001 onwards) (DB069).....	POA
DB C Type spring cultivator series CS5 and CS50 parts list (DB019).....	POA
DB CS1, CS2 and CS3 spring tine cultivator parts list (DB041).....	POA
DB CR1, CR3, CR4 and CR5 Rowcrop cultivator parts list (DB040).....	POA
Semi trailer mower series MT1, MT2 and MT3/6S parts list (DB042).....	POA
DB Potato Spinner (Series D.P.2 & D.P.2A) parts list (DB070).....	POA
DB to Albion part numbers conversion list (not illustrated) (DB035).....	POA
DB Albion 2/3 furrow A series ploughs PC2NA, PC3NA, PC2MA, PC3MA and EPC3MA parts list (DB023).....	POA
DB Albion BE, BH and A series plough handbook (DB024).....	POA
DB Albion 2 furrow alternating 1 way plough (OPC2/12) instruction book (DB025).....	POA
DB Albion Hurricane harvester operating instructions and parts list 1960 (DB026).....	POA
DB Albion MT4 Mower instructions and spare parts list (DB028).....	POA
DB Albion Pick-up baler PB1 operating and servicing instructions 1959 (DB029).....	POA
DB Albion Power ripper parts list (DB031).....	POA
DB Albion Rotary tiller parts list (DB032).....	POA
DB Albion Agricultural loader series AL/1 instruction book (DB033).....	POA
DB Albion P.T.O. Safety guard unit list of parts and fitting instructions (DB034).....	POA

Dorman

Tractor mounted sprayers 'Fenlander', 'Standard' and 'General' range and 'Fenlander' dual-purpose instructions and parts list (DRN001).....	POA
1200L Compact sprayer (bell – crank suspension) instruction book and parts list (DRN002).....	POA

Douglas

Single – cylinder industrial engine (450, 540 and 630cc) instructions, maintenance, and spares list 1947(DO001).....	POA
As above but also covers 770cc engine 1952 (DO002).....	POA

Drott

Drott equipment parts list and instruction book for 9K3 4 in 1 skid shovel and attachments 1961 (DR001).....	POA
--	-----

Enfield

'85' Twin – cylinder air – cooled Diesel engine parts list (EN005).....	POA
'100' Twin – cylinder air – cooled Diesel engine maintenance instructions 1955 (EN001).....	POA
'100' Mk.1 Twin – cylinder air – cooled Diesel engine parts list 1954 (not illustrated) (EN002).....	POA
'100' Single – cylinder air – cooled Diesel engine maintenance instructions 1959 (EN003).....	POA
'100' Single – cylinder air – cooled Diesel engine parts list 1961 (EN004).....	POA

Fairmile

Spreader parts list and instruction book (FAI001).....	POA
--	-----

Fendt

F250GT Instruction manual (FEN001X).....	POA
F250GT Spares manual (FEN002X).....	POA
Farmer 106S – 105S – 104S – 103S Tractor operators manual (FEN003X).....	POA
Farmer 3S – 4S – 104S – 105 – 105S Tractor spares list (FEN004X).....	POA

Ferguson (including Massey Ferguson)

TE-A-20 1947 – 49 Tractor Service sheet (SS006).....	POA
TE-F-20 1951-52 Tractor service sheet (SS007).....	POA
Ferguson Hydraulic System Service Sheet (SS045).....	POA
TE-K20 (Petrol), TE-L20 (vaporising oil) and TE-M20 (lamp oil) vineyard tractor supplement to instruction book (FER007)....	POA
TE-P20 (Petrol), TE-R20 (v.o.), TE-S20 (lamp oil) and TE-T20 (Diesel) industrial tractor supplement to instructions(FER008) POA	POA
Narrow Tractor parts list, supplement to the TE-20 parts list (FER009).....	POA
Vineyard tractor parts list, supplement to the TE 20 parts list (FER010).....	POA
Ferguson 35 tractor (4 cylinder engine) instruction book (FER012).....	POA
Diesel engine type 23c (as fitted to 35 tractor) instruction book (FER014A).....	POA
Diesel engine type 3A-152 (as fitted to 35 tractor) instruction book (FER014B).....	POA
87mm Petrol engine (as fitted to 35 tractor) instruction book (FER014C).....	POA
MF 20 Tractor operators manual, including maintenance and some overhaul instructions (FER181X).....	POA
MF 20F Tractor and loader instruction book (FER182X).....	POA
MF 35 Tractor (with 3 cylinder engine) instruction book (FER013).....	POA
MF 35 Industrial tractor supplementary instruction book (FER013B).....	POA
Vineyard Tractor parts list, supplement to the MF 35 parts list (FER010A).....	POA
MF 40 (2203-5 Industrial) Tractor Operators Manual, includes reference parts list (FER173).....	POA
MF 65 Tractor instruction book (FER015).....	POA

MF 65 Tractor parts list (FER016).....	POA
MF 65 Tractor specifications and performance press release (FER017).....	POA
MF 135 Tractor instruction book includes wiring diagram (AD3152 engine) (FER017A).....	POA
MF 135 Tractor parts list (FER012A).....	POA
MF 165 Tractor service manual, does not cover engine (FER017B).....	POA
MF 165 Tractor instruction book (with A4-212 engine) includes wiring diagram (FER017C).....	POA
MF 168 Tractor Instruction book (FER175).....	POA
MF 175 Tractor instruction book (FER183X).....	POA
MF 230/240/250 Tractor Operators Handbook (FER177).....	POA
MF 550 Tractor instruction book (FER171).....	POA
MF 565 Tractor Instruction book (FER176).....	POA
MF 590 Tractor Operators Handbook (FER178).....	POA
MF 675 Tractor Operators handbook, 1981 (FER180X).....	POA
MF Hydraulic Selector valve fitting and operating instructions (for 35, 65, 135, 165, 175 & 178 tractors) (FER154).....	POA
MF Implement and accessory adaptation, covering the 20, 35 and 65 tractors (FER011).....	POA
MF Implement adaptation, covering the 130, 135, 165 and 175 tractors (FER150).....	POA
Ferguson service tools catalogue (FER094).....	POA
Ferguson Tyre tracks parts list (FER131).....	POA
Ferguson Mouldboard plough instruction book, with basic and hillside ploughing instructions (FER020).....	POA
Ferguson Mouldboard plough manual, comprehensive manual including ploughing instructions (FER021).....	POA
Ferguson Mouldboard plough parts list (FER022).....	POA
T-AE-28 Reversible plough instruction book (FER023).....	POA
Reversible plough parts list (FER024).....	POA
2/3-P-AE-20 Disc plough instructions book (FER025).....	POA
P-AE-20 Disc Plough parts list (FER026).....	POA
MF 26 3 Furrow & MF 34 4 furrow reversible plough operators manual (FER185X).....	POA
MF 26, 30, 32, 34, 40, 41, 46 and 47 Plough bases parts list (FER167).....	POA
MF 40 2 & 3 furrow conventional plough operators manual (FER186X).....	POA
MF 40 Plough parts list (FER161).....	POA
MF 41 2, 3 & 4 furrow conventional plough operators manual (FER188X).....	POA
MF 86 Semi-mounted plough parts list (FER162).....	POA
MF 180 Plough operators manual (FER184X).....	POA
MF 260 Reversible Plough instruction book (FER200X).....	POA
MF 265 2, 3 & 4 furrow reversible plough operators manual (FER187X).....	POA
793 Mouldboard plough instruction book (FER151).....	POA
793 Mouldboard plough parts list (FER125).....	POA
796 Reversible plough parts list (FER127).....	POA
797 Reversible plough parts list (FER128).....	POA
5A/6A/EE-B20 Agricultural mower instruction book (FER028).....	POA
Agricultural mower parts list (FER029).....	POA
706 Mower parts list (FER101).....	POA
736 Mower parts list (FER120).....	POA
775 Rear mounted mower parts list (FER124A).....	POA
MF 60 Cutter bar mower operators instruction book (FER189X).....	POA
MF 70 Rotary mower operators instruction book (FER190X).....	POA
MF 732 Mower instruction book (FER136).....	POA
MF 775 Rear mounted mower instruction book (FER030).....	POA
MF 779 Mid – mounted mower instruction book (FER149).....	POA
740 Forager parts list (FER122).....	POA
760 Forager parts list (FER123).....	POA
M-F 760 Forager instruction book (FER147).....	POA
M-F 762 Chopper instruction book (FER148).....	POA
S-BE-31 Spike tooth harrow instruction book (FER031).....	POA
G-BE-20 Offset disc harrow instruction book (FER032).....	POA
Offset disc harrow parts list (FER033).....	POA
13A-BE-21 6' 0" Tandem disc harrow instruction book (FER034).....	POA
Tandem disc harrow parts list (FER035).....	POA
719 Heavy duty reversible disc harrow parts list (FER107).....	POA
Mounted tandem disc harrow instruction book (FER036).....	POA
Mounted tandem disc harrow parts list (FER037).....	POA
MF 28 Mounted tandem disc harrow parts list (FER159).....	POA
722 Mounted tandem disc harrow parts list (FER112).....	POA
765 Mounted offset disc harrow parts list (FER124).....	POA
Heavy duty spike tooth harrow instruction book (FER038).....	POA
H.D. Spike tooth harrow parts list 1956 (FER031A).....	POA
Spring tooth harrow parts list (FER039).....	POA
Steerage hoe instruction book for types B-KE-20 (with discs) and IB-KE-20 (without discs) (FER040).....	POA
Independent gang steerage hoe instruction book for types D-KE-20 (with discs) and ID-KE-20 (without discs) (FER041).....	POA
Four row steerage hoe parts list (FER042).....	POA
711 Steerage hoe parts list (FER103).....	POA
MF 712 Independent gang steerage hoe operators instruction book and parts list (FER155).....	POA
S-EE-20 Buckrake instruction book (FER043).....	POA
Buckrake parts list 1956 (FER043A).....	POA
713, 718 and 723 Buckrake parts list (FER104).....	POA

9S-KE-20 Spring tine cultivator instruction book (FER044).....	POA
Spring tine cultivator parts list (FER045).....	POA
720 Spring tine cultivator parts list (FER111).....	POA
Rigid tine cultivator parts list (FER046).....	POA
MF 37 Flexible tine cultivator 'Flexitiller' parts list (FER160).....	POA
Tiller parts list (FER047).....	POA
738 Tiller parts list (FER121).....	POA
D-BE-28 Sub-soiler instructions (FER048).....	POA
Sub-soiler parts list (FER048A).....	POA
723 Sub-soiler parts list (FER113).....	POA
G-PE-A20 and G-PE-A2001 Universal seed drill instruction book (FER049).....	POA
Universal seed drill parts list (FER050).....	POA
MF 34-7 drill instruction book (FER156).....	POA
MF 728 Grain and fertiliser drill instruction book and parts list (FER170).....	POA
732 Multi-purpose seed drill parts list (FER119).....	POA
Multi-purpose seed drill fertiliser attachment instruction book (FER051).....	POA
Multi-purpose seed drill fertiliser attachment parts list (FER051A).....	POA
Ridger type R-DE-20 and planter type P-PE-A20 instruction book (FER052).....	POA
Ridger type R-DE-20 and planter type P-PE-B20 instruction book (FER053).....	POA
Ridger type R-DE-20, planter type P-PE-B20 and planter type P-PE-C20 (for chitted seed) instruction book (FER054).....	POA
As FER054, but with fertiliser attachment instructions (FER055).....	POA
Ridger parts list 1948(FER057).....	POA
MF 718 potato planter instruction book (FER106AX).....	POA
728 Ridger parts list (FER117).....	POA
M-F 728 Ridger and 726 potato planter (with fertiliser attachment) instruction book (FER140).....	POA
Potato planter (including ridger conversions) parts list (FER056).....	POA
Potato planter fertiliser attachment assembly instructions (FER056A).....	POA
D-HE-20 Potato spinner instruction book (FER058).....	POA
Potato spinner parts list 1950(FER059).....	POA
728 Potato spinner parts list (FER116).....	POA
718 Automatic potato planter parts list (FER106).....	POA
Massey Harris Ferguson 720 Mounted Spinner - Broadcaster operators instruction book and parts list 1956 (FER203X).....	POA
721 Spinner broadcaster parts list (FER109).....	POA
MF 10 & 12 Spinner-broadcaster operators instruction book and parts list (FER152).....	POA
MF 22-7 Mounted Spinner-broadcaster operators instruction book and parts list (FER204X).....	POA
M-F 721 Trailed spinner broadcaster instruction book (FER145).....	POA
M-F 711 Potato harvester instruction book (FER169).....	POA
M-F 711 Potato harvester parts list (FER142).....	POA
L-JE-40 (tipping) and L-JE-30 (non-tipping) 30 CWT. Trailer instruction book (FER060).....	POA
F-JE-A40 (tipping) and F-JE-A30 (non-tipping) 3 ton Trailer instruction book (FER061).....	POA
F-JE-40, F-JE-A30 and F-JE-A40 Trailer parts list (FER062).....	POA
FE-17 3 ton Trailer parts list (FER062A).....	POA
717 3 ton Trailer instruction book (FER105A).....	POA
717 3 ton Trailer parts list (FER105).....	POA
M-F 25 Trailer parts list (FER166).....	POA
M-F Pallet tippler instruction book (FER139).....	POA
Transporter instruction book (FER063).....	POA
Dump skip instruction book (FER090).....	POA
A-JE-A20 Manure spreader instruction book (FER066).....	POA
A-JE-20 Manure spreader parts list (FER067).....	POA
MF 19-7 Manure spreader instruction book and parts list (FER157).....	POA
F 712 Manure spreader instruction book (FER064).....	POA
F 712 Manure spreader parts list 1956 (FER064A).....	POA
M-F 712 Manure spreader instruction book and parts list (FER065).....	POA
Single row beet topper instruction book (FER068).....	POA
Single and two row beet lifter instruction book (FER069).....	POA
M-KE-A21 Weeder instruction book (FER070).....	POA
M-KE-A21 Weeder parts list (FER071).....	POA
709 Weeder parts list (FER102).....	POA
MF 35-7 Loader operators instruction book and parts list (FER153).....	POA
M-UE-20 High lift loader instruction book (FER072).....	POA
730 High lift loader parts list (FER118).....	POA
L-UE-20 Manure loader instruction book (FER073).....	POA
L-UE-20 Manure loader parts list (FER074).....	POA
S-LE-20 Low volume sprayer instruction book (FER075).....	POA
Medium pressure sprayer instruction book (FER076).....	POA
25 C.F.M. Compressor instruction book (FER086).....	POA
Hydrovane 60 compressor parts list (FER130).....	POA
M-F 760 Hydrovane compressor instruction book (FER146).....	POA
B-FE-20 Earth leveller and blade terracer instruction book (FER077).....	POA
B-FE-20 Blade terracer parts list (FER078).....	POA
Earthmover parts list 1955 (FER077A).....	POA
Multi-purpose blade instruction book (FER087).....	POA
721 Multi-purpose blade parts list (FER108).....	POA

D-FE-20 Post hole digger instruction book (FER079).....	POA
Post hole digger parts list (FER080).....	POA
723 Post hole digger parts list (FER114).....	POA
A-LE-19 Wood saw instruction book (FER081A).....	POA
A-LE-19 Wood saw parts list (FER081).....	POA
H-LE-A20 Hammermill instruction book (FER083).....	POA
Hammermill parts list (FER084).....	POA
Electromatic hammermill instruction book (FER085).....	POA
Massey Harris Ferguson T26 Electromatic hammermill instruction book and parts list 1956 (FER202X).....	POA
Row-crop thinner instruction book (FER088).....	POA
Row-crop thinner parts list (FER088A).....	POA
Kale cutrake instruction book (FER089).....	POA
Kale cutrake parts list (FER089A).....	POA
724 Kale cutrake parts list (FER115).....	POA
W-UE-20 Linkage winch instruction book (FER092).....	POA
Winch parts list (FER093).....	POA
704 Winch parts list (FER100).....	POA
M-F 1/2/3/4 Conventional baler operators instruction book (FER191X).....	POA
M-F 701 Baler parts list (FER137).....	POA
M-F 701 Baler supplementary instructions for Armstrong Siddeley Diesel engine (FER138).....	POA
M-F 703 Baler instruction book 1960 (FER096).....	POA
M-F 703 Baler service manual (FER143).....	POA
M-F 37-7 Hay conditioner instruction book (FER144).....	POA
M-F 400 Combine parts list (FER165).....	POA
M-F 500 Combine instruction book (FER163).....	POA
M-F 510 Combine instruction book (FER164).....	POA
M-F 780 Combine instruction book (FER097).....	POA
M-F 780 Combine parts list part 1 (FER133).....	POA
M-F 780 Combine parts list part 2 (FER134).....	POA
M-F 788 Combine instruction book (FER158).....	POA

Fiat

Fiat '55' Information sheet (SS027).....	POA
R450 Tractor Instruction book (includes 450 '9 speed' tractor, 450 DT & 450 'vigneto' tractor) (FIA003).....	POA
580 Tractor Instruction Book (includes 580 DT) (FIA004).....	POA
640 Tractor Instruction Book (includes 12 speed tractor and 640 DT) (FIA005).....	POA
880 Tractor Instruction Book (includes 880 DT) (FIA006).....	POA
880 & 880DT and 885 & 885DT Tractor instruction book (FIA002).....	POA
1000 Super and 1000 DT Super tractor instruction book (FIA001).....	POA
1300 Super Tractor Instruction Book (includes 1300 DT Super) (FIA007).....	POA

Field Marshall, Marshall, and Track Marshall (see Nuffield for late Marshall)

Field Marshall Series 1 instruction book (FM001).....	POA
Field Marshall Series 1 and 2 Service sheet (SS008).....	POA
Field Marshall Series 3A information sheet (SS028).....	POA
Track Marshall 55 Diesel crawler instruction book and service manual (FM011).....	POA
Track Marshall 90 Tractor instruction book and service manual (FM012).....	POA
TM.2 Cable control unit, as fitted to Track Marshall and Fowler Challenger 2, instruction book and parts list (FM013).....	POA

Fisher – Humphries

Mk.1 and Mk.2 Plough parts list (FIH001).....	POA
---	-----

Fordson and Ford

Fordson Tractor Model N spares list for agricultural, industrial, land utility and crawler 1917-45 (FOR001).....	POA
Fordson Tractor 1939 Service Sheet (SS011).....	POA
Fordson 'N' Instruction book 1936 (FOR003).....	POA
Fordson 'N' Instruction book 1940 (FOR004).....	POA
Fordson Major E27N tractor spare parts list 1945-49 (FOR005).....	POA
Fordson Major tractor 1945-7 service sheet (SS009).....	POA
Fordson Major hydraulic systems and top overhauling a Major Diesel, service sheet (SS012).....	POA
Fordson Major E27N instruction book 1946 (FOR015).....	POA
Fordson Major E1A with Roadless rubber jointed full tracks instructions and maintenance manual (FOR028).....	POA
Fordson Major engine for industrial purposes, instruction book 1949 (FOR019).....	POA
Fordson Major E27N County full tracks (with Perkins P6) instruction book and maintenance manual 1951 (FOR021).....	POA
Fordson Power Major Instruction book (FOR029).....	POA
Fordson Power Major spare parts list 1959 (FOR008A).....	POA
New Fordson Major E1A instruction book, 1953 (FOR030).....	POA
New Fordson Major E1A repair manual 1954 (FOR007).....	POA
New Fordson Major tractor service sheet for petrol, T.V.O. and Diesel models (SS010).....	POA
New Fordson Major information sheet (SS029).....	POA
Fordson Dexta and Super Dexta operators handbook (FOR031).....	POA
Fordson Dexta and Super Dexta parts list 1957 (FOR010A).....	POA
Super Major Instruction book, 1960 (FOR032).....	POA
New Fordson Super Major instruction book (FOR011).....	POA
Ford Major 4000 and Super Major 5000 operators manual 1965 (FOR033).....	POA
Ford 2000, 3000, 4000 and 5000 tractor instruction book covers standard & select o speed 1969 (FOR012).....	POA

Ford 2600, 3600, 4100 and 4600 operators manual 1975 (FOR034).....	POA
Ford 2610, 3610, 3910, 4110, 4610 Tractor Operators Manual (FOR035).....	POA
Ford 5600, 6600, 7600 Tractor Operators Manual (FOR036).....	POA
Ford 5610, 6610, 7610 Tractor Operators Manual (FOR037).....	POA
Ford 6710, 7710, 8210 Tractor Operators Manual (FOR038).....	POA
Ford implements spares list, Elite & F – R mounted ploughs, rear mounted tool bar & tool bar implements 1950 (FOR017).....	POA
Fordson tool bar and equipment instruction book 1950 (FOR020).....	POA
Fordson Elite 3-2 furrow plough instruction book 1946 (FOR024).....	POA
New F-R mounted ploughs instruction book 1952 (FOR025).....	POA
Ford 4 & 6 Cylinder Industrial engines (Diesel 3611 & 5416cc, Petrol 3200 & 4888cc)Parts Bookl (FOR039).....	POA
County Full Track Mark III Instruction and Maintenance Manual (FOR040).....	POA
County Full Track Mark III Spare Parts List (FOR041).....	POA

Fowler

Challenger Mk.3 information sheet (SS030).....	POA
Diesel Crawler tractor Mk.VF spares list (FOW001).....	POA
Fowler VF Tractor Service Sheet (SS030A).....	POA
Series PB petrol engine instruction book (FOW005).....	POA

Fullwood & Bland

Milking Machine buckets and plant parts list 1961 (FUL001).....	POA
Milking plant spares catalogue (FUL002).....	POA

Gascoine

Bucket milker instructions and spares book 1955 (GAS001X).....	POA
--	-----

Gravely

Gravely 6.6hp tractor user manual 1961 (GRA001).....	POA
--	-----

Thomas Green & Son

14-Four 4 Stroke motor mower instruction book and parts list (GRN001).....	POA
17-Four 4 Stroke motor mower instruction book and parts list (GRN002).....	POA
14" Flyweight Motor mower instruction book and parts list (GRN003).....	POA
Master Motor mower instruction book and parts list (GRN004).....	POA
14" Master Lightweight motor mower instruction book and parts list (GRN005).....	POA
17" Master Lightweight motor mower instruction book and parts list (GRN006).....	POA
20" Master Lightweight motor mower instruction book and parts list (GRN008).....	POA

Hatz

Diesel engine instruction book for types ES71, E71, ES75, E75, ES79, ES780, E780, ES785, E785 (HA001).....	POA
Diesel engine parts list, for types as listed above (HA002).....	POA

Howard

Howard 'Gem' Rotovator Instruction book (without engine instructions) (ROT004).....	POA
Howard 'Gem' Series IV instruction book and spare parts list (ROT013).....	POA
Howard 'Gem' V Rotovator parts list (ROT008).....	POA
Howard 220 Rotovator parts list (ROT009).....	POA
Howard 300 & 350 Rotovator and attachments parts list (ROT010).....	POA
Howard 350 Rotovator instruction book (ROT011).....	POA
Howard 352 Rotovator instruction book and parts list (ROT012).....	POA
'E' Mounted model owners handbook with parts list (ROT007).....	POA
'E' Series Instruction book (includes E80) (ROT015).....	POA
'F' Centre mounted rotovator for Ferguson tractor (ROT023X).....	POA
'P' Series Instruction book (ROT016).....	POA
Howard 'Rotacadet' Instruction book (ROT020).....	POA
S80 & S100 Rotovators Instruction book (ROT017).....	POA
Howard 'Haytimer' Instruction book (ROT018).....	POA
Howard Flail Mower Instruction book (ROT019).....	POA
Howard 'Rotaseeder' Instruction book (ROT021).....	POA

International (including McCormick Deering, Farmall etc.)

International Farmall A and B service sheet (SS013).....	POA
McCormick Farmall BMD tractor operators manual 1953 includes wiring diagram (IHC008).....	POA
Farmall BM and BMD Series tractor parts list (IHC008A).....	POA
McCormick – Deering Farmall F-20 Tractor instruction book and parts list (IHC030).....	POA
McCormick – Deering Farmall H and 4 Series tractor service manual (IHC007).....	POA
Farmall H and M electric starting and lighting attachments instruction book and parts list (IHC007A).....	POA
Farmall H and M, W-4, O-4, W-6 and O-6 Power take off attachments parts list (IHC007B).....	POA
International UD-6 Owners manual (IHC001).....	POA
UD-6 Power unit parts list (IHC002).....	POA
BTD-6 Crawler tractor parts list (IHC003).....	POA
McCormick International Super BWD-6 Information sheet (SS031).....	POA
International TD-6 Owners manual (IHC023).....	POA
International T-6 and TD-6 Parts list (IHC024A).....	POA
International T-6, TD-6, T-9, TD-9, TD-14A and TD-18A Service manual (IHC031).....	POA
International Service manual for 9 series tractors. Covers engine types: T-9, TD-9, W-9, WD-9, I-9, ID-9, IU-9, U-9 and UD-9 and chassis types: W-9, WD-9, I-9, IUD-9, U-9 and UD-9 (IHC004).....	POA
International 260A wheel loader tractor & wheel backhoe tractor service manual (serial no. 200501 and up) (IHC076X).....	POA
International 276 Tractor operators manual includes wiring diagram (IHC056).....	POA

International 276 Tractor service manual (IHC044).....	POA
International 374 Tractor operators manual includes wiring diagram (IHC057).....	POA
International 433, 533, 633 (including V + E versions) & 733 (V + E version) Diesel Tractors service manual, covers chassis, transmission & hydraulic draft and position control (IHC065).....	POA
International 454 Tractor operators manual includes wiring diagram (IHC036).....	POA
International 454, 474, 574, 674 Tractors and 2400 & 2500 series 'A' industrial tractors instruction book includes wiring diagram (IHC046).....	POA
I.H.C. 484, 584, 684, 784 and Hydro 84 Agricultural tractors and 248, 258, 278 and Hydro 268 industrial tractors operators manual includes wiring diagram (IHC048).....	POA
I.H.C. 485, 485XL, 585, 585XL, 685, 685XL, 785, 785XL, 885 885XL and Hydro 85 Agricultural tractors and 248, 258, 278 and Hydro 268 Industrial tractors operators manual includes wiring diagram (IHC029).....	POA
International 634 service manual (IHC077X).....	POA
International 966 tractor operators manual (IHC062).....	POA
International 1255XL & 1455XL operators manual (IHC079X).....	POA
McCormick B250 Diesel tractor parts list (IHC010).....	POA
McCormick – International B614 Diesel tractor operators manual includes wiring diagram (IHC052).....	POA
McCormick – International B614 Diesel tractor parts list (IHC053).....	POA
McCormick – Deering W-6 Tractor Owners manual includes wiring diagram (IHC042).....	POA
McCormick – Deering W-12 Tractor instruction book and parts list (IHC025).....	POA
McCormick International 434 Tractor series operators manual includes wiring diagram (IHC041).....	POA
Case – International 385 Tractor operators manual (IHC075).....	POA
Case – International 433, 533, 633, 733 and 833 Tractors operators manual includes wiring diagram (IHC066).....	POA
Case – International 485 Tractor operators manual (IHC073).....	POA
Case – International 685 Tractor operators manual (IHC068).....	POA
McCormick International B1-32, B1-34 (3 furrow) and B1-42 (4 furrow) mounted ploughs instructions & parts list (IHC051)....	POA
McCormick International B21U tractor mower instruction book (IHC037).....	POA
B23 Three point mounted mower (IHC027).....	POA
McCormick International B-45 pick – up baler instruction book and parts list (IHC017).....	POA
McCormick International B-46 pick – up baler parts catalogue (IHC035A).....	POA
International 430 & 440 Twine and wire balers operators manual (IHC078X).....	POA
International 24-1 Front end loader operators manual (IHC064).....	POA
Case – International FD, GD and HD Loaders for 90 & 94 Series Tractors operators manual & fitting instructions (IHC071)...	POA

J.A.P.

'The JAP Book', covering the care and maintenance of standard, sports and racing motorbike engines (JAP028).....	POA
Industrial engines reference book (JAP002).....	POA
50,75,125 & 150cc Horizontal and 125 & 150cc Vertical shaft lightweight parts list (JAP023).....	POA
50,75,125 & 150cc Horizontal and 150cc Vertical engine users handbook (JAP023A).....	POA
D270 and D415 Type 827H and 842H Workshop manual (JAP025).....	POA
D270 Diesel engine operators handbook (JAP026).....	POA
Mk.2A Industrial engines reference book (JAP001).....	POA
Mk. 7, 7/1, 10/2, 12/2 and 15/2 engine instruction book (JAP015).....	POA
Model 0 34cc engine instruction book and spare parts list (JAP006).....	POA
Model 2S Industrial engine reference book and spare parts list (JAP007).....	POA
Model 3 Type 1 Industrial engine reference book and parts list (JAP008).....	POA
Model 3 Type 26 Industrial engine reference book and parts list (JAP009).....	POA
Model 3 Type 28 Industrial engine reference book and parts list (JAP010).....	POA
Model 4F Reference book and parts list (JAP013).....	POA
Model 5 Engine service sheet (SS014).....	POA
Model 10, 10/1, 10/2, 12, 12/1, 12/2, 15 and 15/2 Workshop manual (JAP016).....	POA
Model 34B, RS.34 and S.34 34cc Engine handbook (JAP017).....	POA
Model 55 Reference book and parts list (JAP018).....	POA
Model 55 Twin cylinder Type 1 reference book and parts list (JAP019).....	POA
Model 55CB Series twin cylinder spare parts list (JAP020).....	POA
Model 80 and C.80 79.9cc Instruction book and parts list (JAP021).....	POA
Model 80 Type 20 (as used on the Qualcast 'Commando') parts list (JAP022).....	POA
Model 80 Type 71 two-stroke engine spare parts list (JAP003).....	POA
Model JS8 Type 10 (for Gardenmaster 80 Series 2) parts list (JAP004).....	POA
Model JS8 Type 25 (for Gardenmaster 80 Series 3) parts list (JAP005).....	POA
Model R80 Type 3 79.7cc two-stroke engine instruction book and parts list (JAP029).....	POA
Model S80 Type 4 79.7cc two-stroke engine instruction book and parts list (JAP030).....	POA

John Deere

A and B Series Tractors service sheet (SS015).....	POA
Models 1830, 2030 and 2130 Tractor parts list (JD002).....	POA
Model 4020 (Row-Crop, Standard and Hi-Crop) Tractor operators manual (JD004).....	POA
Model 4230 Tractor operators manual (JD005).....	POA
5010 Standard Tractor operators manual (JD006).....	POA
100F Series chisel plough operators manual (JD007).....	POA
214 Series baler operators manual (JD008).....	POA
214 Pick-up baler operators manual (JD011).....	POA
B, B-A, FB-B, DF-B and DR-A End wheel grain drills operators' manual (JD009).....	POA
307 Gyramor rotary cutter operators manual (JD010).....	POA

Jones

Mk 10 & 12, and AC505/7 Baler instruction book (JNS001).....	POA
--	-----

Mk 10 & 12 and AC505/7 Baler parts list (JNS002).....	POA
Mk 18 and AC808 pick-up Baler parts list (JNS003).....	POA
155 Baler parts list (JNS004).....	POA
‘Star’ Baler instruction book and parts list (JNS005).....	POA
Series 2 ‘Star’ Baler parts list (JNS006).....	POA

Kohler

Model K91, K141, K161 and K181 owners manual with service instructions, also covers options kits (KOH001).....	POA
Model K241, K301 and K321 engine owners manual with service instructions, also covers options kits (KOH002).....	POA

Kubota

F2260, F2560(E), F3060 Workshop manual (KU001X).....	POA
--	-----

Landmaster

Landmaster 85 Owners handbook and parts list (LAN001).....	POA
Gardenmaster 100 Owners handbook (LAN002).....	POA

Lely

Model P300 Fertiliser broadcaster instruction and spares manual (LEL001X).....	POA
Model 1500 Fertiliser broadcaster operators manual and parts list (LEL002X).....	POA

Lister

Lister Domestic Pump & Automatic Pressure Set, Models DEP 1- 6, instructions & parts list (LIS003).....	POA
24M Fertiliser broadcaster instruction book and parts list (LIS001).....	POA
Lister Blackstone Tractor Rake instructions and spare parts list (LIS005).....	POA
Lister Blackstone Fertiliser Broadcaster working instructions (LIS004).....	POA

Lloyd

‘Pegasus’ Model G mower instructions and parts list (LOY001).....	POA
The Dragon Tracklayer information sheet (SS032).....	POA

Lorant

‘Class’ Patent pick-up and stationary press instruction book (LO001).....	POA
---	-----

Lucas

Type C40A Generator workshop instructions (LU001).....	POA
G.J.4, R.F.4 and 4.V.P. Magneto service sheet (SS016).....	POA
Lucas coil ignition operating instructions (LU008).....	POA
Service Data for all Lucas equipment fitted to Ferguson tractors (LU009).....	POA
Instructions for fitting Lucas lighting equipment to Ferguson tractors (LU004).....	POA
Lighting Equipment for tractors (reprint catalogue) (LU003).....	POA

MAG Engines

Operating instructions for 1023-SRL, 1035-SRL, 1040-SRL and 1045-SRL four stroke engines (MAG001).....	POA
Operating instructions for 1017-SRL, 1026-SRL and 1029-SRL engines (MAG002).....	POA

Massey Harris

55 and 55K Tractor repair parts list (MH001A).....	POA
82 Tractor Service sheet (SS023).....	POA
102 Tractor operating instructions & service manual (standard models no. 365001 on, row-crop models 265001 on)(MH028).....	POA
744D Tractor service sheet (row-crop, standard and half-track) (SS019).....	POA
744D Tractor service manual (MH025).....	POA
744D Tractor parts list (MH026).....	POA
744PD Tractor instruction book and service manual (MH024).....	POA
744PD Tractor parts list (MH002).....	POA
745 Tractor service manual, 1954 (MH003).....	POA
745 and 745S Tractor parts list (MH004).....	POA
Service manual for hydraulic equipment as fitted to 744D and 745 Tractors (MH005).....	POA
No. 5 Binder (Left hand Cut) Instructions for erecting and operating, 1911 (MH030).....	POA
21 and 21A Combine owners manual 1947 (MH010).....	POA
726 Combine service manual, 1952 (MH011).....	POA
Newage – Austin 4 litre engine service manual, as fitted in 726 (MH013).....	POA
735 Combine parts list (MH018).....	POA
Newage BMC 1 ½ litre engine (for 735 combine) spare parts list (MH022).....	POA
750 Combine parts list (MH019).....	POA
780 Combine and engine operators manual (MH020).....	POA
780 Combine parts list (MH021).....	POA
701 Baler service manual, 1953 (MH006).....	POA
701 Baler parts list, for machines built prior to 1953 (MH007).....	POA
701 Baler parts list, for machines built from 1953 onwards (MH008).....	POA
Wisconsin 4 cylinder engine model VE4 (as used on M.H.701 Baler) service manual and parts list, 1951 (MH009).....	POA
734 Mower instruction book and parts list (MH017).....	POA
707 Three ton trailer parts list (MH016).....	POA
723 Buckrake instruction book (MH023).....	POA
720A Grain and Fertiliser drill instruction book and parts list (MH029).....	POA
728 Grain and fertilizer drill operating instructions, 1957 (MH027).....	POA

F.W.McConnel

Power arm instruction book and spare parts list (MCL001).....	POA
Allwork sawbench instructions and spare parts list (MCL002X).....	POA

Armhead instruction book and parts list (MCL003X).....	POA
Minneapolis Moline	
Universal and Standard 'Z' tractor parts list (MM001).....	POA
Standard 'UTS' Instruction book, 1942 (MM002).....	POA
Standard and Universal 'RT' Instruction book and parts list (MM003).....	POA
U.D.S. Diesel Tractor Service sheet (SS020).....	POA
Morris	
M.E.B. Mk.IV Industrial engine manual, 195, as fitted in Jones Invicta pick-up baler & Massey-Harris 726 Combine (MO001). POA	
Mountfield	
M1 Cultivator operators instruction book (MOU001X).....	POA
New Holland	
76 Automaton pick-up baling press assembly and operating instructions (NH001).....	POA
Super Hayliner 68 operators manual (NH002).....	POA
Super Hayliner 268 operators manual (NH006).....	POA
No. 76 Baler parts list (NH003).....	POA
Model 445E Mower operating manual (NH005X).....	POA
Model 445E Mower parts list (NH004).....	POA
Nuffield (including B.M.C., Leyland, Marshall etc.)	
Nuffield parts list for all models prior to 1964 (NU007).....	POA
3.4 BMC Diesel engine parts list (as used on 4DM), 3.8 BMC 4 cylinder diesel engine parts list (as used on 4DM), Perkins P4 diesel engine parts list (as used on 4DM) (NU033).....	POA
BMC Petrol / TVO engine parts list (as used on 4M & 4PM) (NU032).....	POA
2.55 BMC Diesel engine parts list (as used on 3DL) (NU031).....	POA
Universal Tractor service sheet (SS017).....	POA
Universal Hydraulic System Service Sheet (SS042).....	POA
Universal Tractor drivers handbook includes wiring diagram (NU001).....	POA
Universal 3 Tractor drivers handbook includes wiring diagram (NU002).....	POA
Universal 3 Tractor workshop manual (NU005).....	POA
Universal 4 Tractor, types DMV4 and 4DM with B.M.C. Diesel engine, driver's handbook includes wiring diagram (NU004).....	POA
Universal Tractor Workshop manual, covers M4, PM4, DM4, M3, PM3, DM3, M3V, PM3V & DM3V (NU044).....	POA
Nuffield Tractors types M3, M4, PM3 and PM4 1948-52 service sheet (SS018).....	POA
Nuffield Non Q-Cab 245 / 262 / 272 and Synchro 245 / 262, 462 / 272, 472 Workshop Manual (NU041).....	POA
Nuffield 342 and 460 Tractor Drivers handbook includes wiring diagram (NU038).....	POA
Nuffield 344 Tractor handbook includes wiring diagram (NU023).....	POA
BMC Nuffield 3/45 and 4/65 operators manual (NU015).....	POA
10/42 and 10/60 Tractor service parts list (NU006A).....	POA
General data book, covers 3/45 & 4/65 tractor & engine, 10/42 & 10/60 engine & the 3 & 4 cylinder diesel engine (NU009).....	POA
BMC Mini tractor workshop manual including additional information for Nuffield 4/25 tractor (NU012).....	POA
Mini and 4/25 Tractor petrol and diesel engine (engines only) parts list, 1968 (NU018).....	POA
BMC 4/25 Tractor service parts list (NU018A).....	POA
BMC Tractors mechanical service parts list, petrol, V.O. and P4 diesel (NU019).....	POA
Leyland 154 Drivers Handbook (NU040).....	POA
Leyland / Nuffield 154 tractor workshop manual (NU010).....	POA
Leyland 255 Tractor operators manual includes wiring diagram (NU021).....	POA
255 (344) and 270 (384) Tractor repair manual, includes engine (NU034).....	POA
Leyland 270 Tractor operators manual includes wiring diagram (NU020).....	POA
Leyland 285 and 485 Tractor operators handbook includes wiring diagram (NU028).....	POA
Leyland 285 and 2100 Tractor workshop manual (NU035).....	POA
Leyland 384 Tractor handbook includes wiring diagram (NU024).....	POA
Leyland 245 Q-Cab Tractor operators manual (NU025).....	POA
Leyland 262 Q-Cab Tractor operators manual (NU026).....	POA
Leyland 272 Q-Cab Tractor operators manual (NU027).....	POA
Leyland 6552/3 loader, for use with Leyland 344, 384 and Nuffield 3/45, 4/65 (NU016).....	POA
Leyland 2100 & 4100 Tractor operators manual. Covers early non – synchro models. 1975 includes wiring diagram(NU036) POA	
Leyland 98mm Diesel engine,as used on 255, 270, 285, 485, 2100 & 4100 tractors), workshop manual supplement (NU037) POA	
Leyland Explorer Synchro (602, 702, 802, 604, 704, 804,) Tractor Operators handbook includes wiring diagram (NU039).....	POA
Oliver	
Oliver 80 Tractor Service Sheet (SS033A)	POA
Onan	
Service manual and parts list for Onan electric plant (ONA001).....	POA
Ota	
Ota and President Tractors information sheet (SS032).....	POA
Perkins	
P Series diesel engine service bulletins, 1950 (PER001).....	POA
P Series Mk.3N spare parts list (PER003).....	POA
P3 144 Diesel engine handbook (PER004).....	POA
P3 144 Diesel engine workshop manual, 1958 as fitted to Fordson Dexta (PER004A).....	POA
P3 (TA) Engine operators handbook, 1955 (PER005).....	POA
P3 Series engine workshop manual, 1952 (PER005A).....	POA
P3 and P4 Diesel engines service sheet (SS021).....	POA

P4 and P6 Engine workshop manual and instruction book, includes B6.305 and P4.203 engines, 1962 (PER006).....	POA
P6 (TA) Diesel engine service sheet (SS022).....	POA
L4 Operators handbook, 1955 (PER007).....	POA
L4 Operators and mechanics handbook, 1956 (PER007A).....	POA
L4 Spare parts list (PER007B).....	POA
L4 Workshop manual, 1955 (PER007C).....	POA
4-107 and 4-99 Diesel engine handbook, 1965 (PER008).....	POA
4-107 Parts list (PER008A).....	POA
4-99 Diesel engine parts book, 1964 (PER009).....	POA
4-99 Diesel engine workshop manual, 1960 (PER009A).....	POA
4-107 and 4-99 Workshop data (building tolerances, clearances and timing details), 1965 (PER010).....	POA
4-270 Diesel engine handbook, 1965 (PER011).....	POA
4-270 Diesel engine parts book (PER012).....	POA
4.248, 4.236, 4.212 Diesel engines workshop manual (PER018X).....	POA
4.236A Engine parts list (PER014).....	POA
6.354 Agricultural engine parts list (PER015).....	POA
6.354 Engine handbook (PER016).....	POA
6.354 Engine series workshop manual covers T6.354, 6.3542 & 6.372 (PER017).....	POA

Petter

AA1 and AB1 Operators handbook and parts list (PET007).....	POA
AV1 and AV2 Series II operators handbook and parts list, 1957 (PET003).....	POA
AVA Operators handbook and parts list, 1964 (PET004).....	POA
PA Range operators handbook and parts list (PET001).....	POA
PAV4 and PAV4K Operators handbook and parts list, 1955 (PET002).....	POA
PAZ1 Operators handbook and parts list, 1955 (PET005).....	POA
PH Operators handbook and parts list, 1966 (PET006).....	POA

PZ

PZ Haybob Instruction manual and spare parts list (PZ001).....	POA
PZ Cyclomower CM135 instruction and spares book (from serial no. 52800) (PZ003X).....	POA
PZ Cyclomower CM135 instruction and spares book (from serial no. 7402500) (PZ004X).....	POA
PZ Cyclomower & Conditioner CM165H & TK165 instruction book & spare parts list (PZ010X).....	POA
PZ Cyclomower CM185H instruction & spare parts list (from serial no. 0000205) (PZ002X).....	POA
PZ Cyclomower CM210 instruction and spares book (from serial no. 0001209) (PZ006X).....	POA
PZ Cyclomower CM215 instruction and spares book (from serial no. 0008016) (PZ005X).....	POA
PZ Cyclomower CM4 instruction book and spare parts list (PZ008X).....	POA
PZ Cyclomower Falazet 230 instruction book and spare parts list (from serial no. 0001022) (PZ009X).....	POA
PZ Grasspa HS360 instruction book and spares list (from serial no. 0002154) (PZ007X).....	POA

Qualcast

Commodore 14" Motor mower instruction book and parts list (QUA002).....	POA
'Super Panther' Ball bearing roller mower instruction book and parts list (QUA001).....	POA
Qualcast Suffolk Punch 30S, 35S, 43S, 35SK & 43SK owners manual (QUA003).....	POA

Ransomes, Sims and Jefferies (including F-R implements)

Good Ploughing and How to Achieve it, Ransomes ploughing guide (RA066).....	POA
Ransomes MG2 Tractor parts list (RA093).....	POA
Ransomes MG2 Tractor Service Sheet (SS022C).....	POA
Ransomes MG5 Tractor operating and maintenance instructions (RA000).....	POA
Ransomes MG5 Tractor spare parts list (RA001).....	POA
Ransomes MG6 and ITC Tractors instruction book (RA003A).....	POA
Ransomes MG40 Tractor instruction book (RA002).....	POA
Ransomes 600cc Petrol engine instruction book and parts list (RA018).....	POA
Ransomes Type 34R Diesel engine instruction book and parts list (RA019).....	POA
Drayton Type 34R Diesel engine (as fitted to MG6, ITC & ITW tractors) instruction book and parts list (RA094).....	POA
'Ajax' Mk.3 Lawn mower instruction book (RA062).....	POA
'Auto-Certes' 20 in. Mk.3 and Mk.3M Motor mower instructions (RA067).....	POA
Ransomes Horse ploughs parts list 1951 (RA020).....	POA
No.s 2 to 8 RSLD & RSLM Self-lift tractor ploughs instructions and parts list (RA022).....	POA
No.3 RDS 2 furrow and No.s 4A & 4B RDS 3 furrow tractor plough instructions and parts list (RA021).....	POA
No.3 'Unitrac' and No.4 'Unitrac Major' Tractor ploughs instructions and parts list (RA077).....	POA
No.3 & 3A 'Motrac' Tractor plough instructions and parts list (RA091).....	POA
No.4 'Midtrac' Tractor plough instructions and parts list (for no.s 3 & 4) (RA028).....	POA
No.5 'Midtrac' Tractor plough instructions and parts list, 1939 (RA029).....	POA
No.7 'Hexatrac' Tractor plough instructions and parts list (for No.s 1-4 & 7) (RA025).....	POA
No.8 'Midtrac' Tractor plough instructions and parts list (RA089).....	POA
No.s 9, 10, 12, 13, 15 RSLD & RSLM Self-lift tractor ploughs instructions and parts list (RA023).....	POA
No.9B 'Multitrac' Tractor plough Instruction book and parts list (RA090).....	POA
No.10 'Multitrac' Plough instructions and parts list (RA016).....	POA
No.10 'Quintrac' Tractor plough instructions and parts list (RA075).....	POA
TS4C, D, F, G, H and K 'Jumbotrac' Tractor ploughs instructions and parts list (RA027).....	POA
TS6J 'Duotrac Major' Tractor ploughs (covers TS6D, E, H, & J) instructions and parts list (RA070).....	POA
TS6L Ransomes Sims & Jefferies 'Duotrac Major' Plough instructions and parts list (covers TS6D,E,H,J,K,L) (RA008).....	POA
TS12, TS12A & TS35 RSLD & RSLM Fruit & hop self-lift tractor ploughs instructions and parts list (RA069).....	POA
TS26C 'Motrac Major' Tractor ploughs instructions and parts list (covers TS26, 26A, 26B & 26C) (RA074).....	POA

TS27A Ransomes Sims & Jefferies 'Unitrac Minor' Tractor plough instructions (RA006).....	POA
TS29B RSLD & RSLM 'Major' Self-lift tractor ploughs instructions & parts list (RA024).....	POA
TS39A & B 'Hexatrac' Ploughs instructions and parts list (RA071).....	POA
TS43 & TS43A 'Motrac' plough instructions and parts list (RA014).....	POA
TS46 'Multitrac' Tractor plough instructions and parts list (RA092).....	POA
TS46B 'Multitrac' Tractor plough instructions and parts list (for TS46A & B) (RA030).....	POA
TS46D 'Multitrac' Tractor plough instructions and parts list (RA012).....	POA
TS54A and TS54D Plough instructions and parts list (RA013).....	POA
TS59R Mounted plough instructions and parts list (RA032).....	POA
TS59Z Mounted plough instructions and parts list (RA033).....	POA
TS64J Mounted plough instructions and parts list (RA034).....	POA
TS65 & TS66 Single furrow mounted plough (For MG6 Tractor) (RA015).....	POA
TS69 'Hexatrac' Plough instructions and parts list (RA026).....	POA
POA	
TS72 Mounted plough instructions and parts list (RA035).....	POA
TS78B Semi-mounted plough instructions and parts list (RA036).....	POA
TS81 Mounted reversible plough instructions and parts list (RA037).....	POA
TS82 Mounted reversible plough instructions and parts list (RA088).....	POA
TS83 Mounted reversible plough instructions and parts list (RA038).....	POA
TSR103 Reversible plough instructions and parts list (RA082).....	POA
TSR109 Reversible plough instructions and parts list (RA083).....	POA
'Junotrac' Tractor ploughs instructions and parts list (covers no.3, TS11C, TS13C, TS11D & TS13D) (RA072).....	POA
'Junotrac' Tractor ploughs instructions and parts list (covers no.4 & 5, TS21, TS21A, TS17 & TS17A) (RA073).....	POA
'Solotrac' Tractor plough instructions and parts list for 1C, D, E, F, K & L (RA031).....	POA
'Unitrac' & 'Unitrac Major' Self-lift tractor ploughs parts list 1939 (RA076).....	POA
RLMX Tractor plough parts list 1939 (RA068).....	POA
No.10C 'Dauntless' & C13C Tractor cultivators instructions and parts list (RA058).....	POA
No.11 'Dauntless' Tractor cultivator instructions and parts list (RA059).....	POA
No.s 13B & 14B 'Dauntless' Tractor cultivators instructions and parts list (RA004).....	POA
Ransomes Sims & Jefferies Tractor cultivator type C28 instructions and parts list (RA009).....	POA
Ransomes Sims & Jefferies Tractor cultivators types C65A & C65B instructions and parts list (RA010).....	POA
Hay and straw baling press instruction book (RA063).....	POA
Hay and straw baling press parts list (RA064).....	POA
Ransomes Sims & Jefferies Hornsby 'Standard' binders parts list, 1937 (RA011).....	POA
Model M & RLP Pick-up balers & RLS stationary baler instructions and parts list (RA005).....	POA
C60 Rear tool-bar frame instructions and parts list (RA060).....	POA
Instructions for the Steam Threshing Machines manufactured by Ransomes, Sims & Jefferies, very early book (RA200X)....	POA
MST 42 Tractor combine harvester spare parts list (RA098).....	POA
MST 56 Tractor combine harvester service manual (RA097).....	POA
801 Combine Harvester operators instructions (serial no. 031425 onwards) (RA099).....	POA
801 Combine Harvester parts list (serial no. 031425 onwards) (RA100).....	POA
902 Self propelled combine harvester service manual (serial no. 002,528 onwards) (RA101).....	POA
902 Combine harvester hydraulic system supplementary service manual (RA102).....	POA
902 Combine harvester spare parts list (serial no. 002,528 onwards) (RA103).....	POA
1001 Combine Harvester operators instructions (serial no. 052451 onwards) (RA084).....	POA
Cavalier 2800 Combine Harvester instruction book (serial no. 064298 onwards) (RA086).....	POA
Crusader 2800B Combine Harvester parts list (serial no. 6415001 onwards) (RA104).....	POA
'Cropguard' Sprayer Mark 4 Service manual and list of parts (RA096).....	POA
Faun 1600 Potato harvester parts list (RA105).....	POA
No.3 "Baron" Tractor Disc Harrows instructions book and parts list (RA106).....	POA
F-R Mounted plough parts list, 1949 (RA039).....	POA
F-R Mounted plough instruction manual, 1949 (RA039A).....	POA
F-R Mounted ploughs models EP3G, 3H, 2J parts list (not illustrated) (RA040).....	POA
F-R TS50 & 51 Mounted reversible plough instruction book (RA040A).....	POA
F-R TS51 Single-furrow mounted reversible plough instructions and parts list (RA041).....	POA
F-R TS55 & TS55A Mounted plough parts list (RA042).....	POA
F-R TS55E Mounted plough instructions and parts list (RA043).....	POA
F-R TS59E Mounted plough instructions and parts list (also covers TS59J & M) (RA044).....	POA
F-R TS59E & F Mounted plough instructions and parts list (RA095).....	POA
F-R TS59N Mounted plough instructions and parts list (RA045).....	POA
F-R TS63 Mounted plough instructions (RA046).....	POA
F-R TS63 & TS63A Mounted plough parts list (RA047).....	POA
F-R TS63E Mounted plough instructions and parts list (RA048).....	POA
F-R TS64 & TS64A Mounted ploughs instructions (RA049).....	POA
F-R TS64 & TS64A Mounted ploughs parts list (RA050).....	POA
F-R TS68 Reversible plough instructions and parts list (RA052).....	POA
F-R TS70 Mounted plough parts list (RA053).....	POA
F-R TS74 Reversible plough instructions and parts list (RA054).....	POA
F-R TS1013 Mounted plough (for the Fordson Dexta) instructions and parts list (RA079).....	POA
F-R TS1015 Mounted plough (for the Fordson Dexta) instructions and parts list (RA080).....	POA
F-R C68 Mounted cultivator instructions and parts list (RA055).....	POA
F-R C72 Mounted toolbar instructions and parts list (RA056).....	POA
F-R C73 & C74 Tool bars instructions and parts list (RA057).....	POA
F-R Three ton trailer instructions and parts list (types TT1017 tipping and TT1018 non-tipping) (RA081).....	POA

F-R Mounted Potato diggers types PD4, PD4A & PD5 instruction book (RA065).....	POA
Raven Engineering Co.	
‘Farmers Boy’ Series II instruction book and spare parts list (RAV001).....	POA
Roadless (see also individual manufacturers for modified models)	
Roadless Traction Ploughmaster 95 parts list (RT001X).....	POA
Ruston, Hornsby and Ruston & Hornsby	
Ruston Vertical air-cooled diesel engines, class YDA, parts list (RH006).....	POA
Ruston Vertical high-speed oil engines, class VO & VH (RH009).....	POA
Ruston Clover huller duplicate parts list (RH010).....	POA
R & H Ruston oil engines Mks. VTH, VTHZ, VSH, VSHZ and VSHL parts list (RH003).....	POA
R & H Ruston horizontal oil engines class HR spare parts list, 1955 (RH007).....	POA
R & H Horizontal oil engines types 1HR, 1XHR and 1YHR spare parts list (RH001).....	POA
R & H PT 1 ½ - 4 B.H.P. petrol engine instruction book and parts list (RH004).....	POA
Hornsby Straw trussers instruction book and parts list (RH011).....	POA
S.E.Opperman Ltd.	
Opperman Motorcart instructions, maintenance and spare parts list (SEO001).....	POA
Solex	
Model A.I.P. Carburettor instruction book (SOL001).....	POA
Models F.A.I. and A.I.C. Instruction book and parts list (SOL002).....	POA
Downdraught self-starting carburettor instruction book (SOL003).....	POA
Types M and MO Carburettor instruction book (SOL004).....	POA
Steelfab	
506 Agricultural loader (for use with MF35,135,65,165) instruction book and parts list (STE001).....	POA
600 Loader (for use with Fordson Major, Super Major & Power Major) instruction book and parts list (STE002).....	POA
606 Agricultural loader (for use with Nuffield 460,1060, 342 & 1042) instruction book and parts list (STE003).....	POA
800 Digger operators manual and parts list (STE004).....	POA
Stuart	
Marine engine types P5 and P55 instruction book and parts list (STU001).....	POA
Suffolk	
Lawn mower spares catalogue, covers most Suffolk mowers, as well as engines etc. (SUF001).....	POA
‘Super Colt’ Motor mower instruction book and parts list (SUF002).....	POA
Teagle	
‘Jetcut’ Hedge and weed cutter instruction & parts book (TEA001).....	POA
Super ‘Jetcut’ Hedge & weed cutter instructions & spares List (TEA002).....	POA
‘Jetscythe’ Instnctions & spares list (TEA003).....	POA
Four-Stroke Series B2 and C1 Engine inc Vapourising Oil instnctions & spare parts book (TEA 004).....	POA
Two-Stoke 49 c.c. Petrol Engine instrusctions & spare parts list (TEA005).....	POA
Trusty	
Trusty ‘Steed’ 4-wheel tractor spare parts list and instruction book (TRU001).....	POA
Trusty tractor instruction book (TRU002).....	POA
Turner	
The Turner ‘Yeoman’ Diesel tractor information sheet (SS034).....	POA
Diesel engine service manual, includes marine engines (some illustrations) (TUR001).....	POA
4V95 Mk. I and II Tractor service sheet (SS024).....	POA
4V95 Mk. II and III Tractor Service Sheet (SS040).....	POA
Universal	
Models 550M & 640 Tractor instruction book (UNV001X).....	POA
Vicon	
Vicon – Lely ‘Acrobat’ Assembly and operating instructions (VIC001).....	POA
Vicon Vari – spreaders 400, 500 and 600 instruction book (VIC002).....	POA
Vicon Vari - spreaders PS602 / 802 / 1002 / 1002T instruction book (VIC004).....	POA
Vicon Vari – spreader PS1001 / 1001T instruction book (VIC003X).....	POA
Villiers (including Norton)	
Villiers water cooled stationary engines (hopper and tank cooled) running instructions (VIL041).....	POA
65cc Lightweight industrial engine operating instructions (VIL018).....	POA
65cc Lightweight industrial engine replacement parts list (VIL019).....	POA
Mk.2F Engine unit instruction book and parts list (VIL020).....	POA
Mk.s 7, 7/1, 10, 10/1, 12, 12/1, 12/2, 15, 15/2 four stroke engines handbook (VIL010).....	POA
Mk.7, including Mk.7/1 parts list (VIL009).....	POA
Mk.10 Instruction book (VIL006).....	POA
Mk. 10, 20 & 25 4-stroke Engine Service Sheet (SS022B).....	POA
Mk.26C Two stroke engine instruction book and parts list (VIL013).....	POA
Mk.40 Instruction book and parts list (VIL014).....	POA
D270 and D415 Diesel engine instruction book (VIL029).....	POA
F.15 Four-stroke Industrial engine instruction book and parts list (VIL005).....	POA
J8, JR8, JRS8 and JS8 Users handbook (VIL021).....	POA
L34 and LS34 Lightweight two-stroke, 34cc, engine instruction book (VIL015).....	POA
LS34 Type 1 Standard parts list (VIL016).....	POA

V17 Vertex engine operating instructions and spares list (VIL030).....	POA
Types 303H and 303V Industrial engine users handbook (VIL022).....	POA
Type 303H Model LS34 Operating instructions (VIL023).....	POA
Types 410H-1, 410H-2 and 412H-2, mk.s 10/1, 10/2, 12/1, 12/2 four-stroke heavy-duty industrial engines parts list (VIL004).....	POA
Types 430H, 441H and 495H Models 4/3, 4/3B, 5, 5B and 6 instruction book (VIL024).....	POA
Types 505H, 507H and 507H-2 Replacement parts list (VIL025).....	POA
Types 507H-1, 515H and 515V Four-stroke industrial engines instruction book (VIL007).....	POA
Types 512H and 515H Replacement parts list (VIL026).....	POA
Types 512V and 515V Replacement parts list (VIL027).....	POA
Type 515V Vertical engine parts list (VIL028).....	POA
Norton Villiers C12 industrial engine instruction book and spare parts list (VIL031).....	POA
Norton Villiers C15 (Mk.15 & 15/2) industrial engine parts list (VIL032).....	POA
Norton Villiers C30 Industrial engine Instruction book and spare parts list (VIL033).....	POA
Norton Villiers C45 Industrial engine Instruction book and Spare parts list (VIL034).....	POA
Norton Villiers D16 Industrial engine parts list (VIL035).....	POA
Norton Villiers F12 Industrial engine Instruction book and Spare parts list (VIL037).....	POA
Norton Villiers F12 Maintenance manual (VIL038).....	POA
Norton Villiers F15 Maintenance manual (VIL039).....	POA

Vincent

Universal two-stroke engine instruction book and parts list (VIN001).....	POA
---	-----

Welgar

AP45 & AP45D Pick-up baler instructions with English translation (WEL001X).....	POA
---	-----

Westwood

Westwood Gazelle instructions (WST001).....	POA
---	-----

Whitlock

Whitlock 105 MK2 Excavator / shovel spares list & instruction manual (WHI003X).....	POA
Whitlock 303 Offset excavator and power shovel instruction manual & spares list (WHI007X).....	POA
Whitlock 307 & 308 excavator and loading shovel instruction manual & spares list (WHI004X).....	POA
Whitlock 370 excavator loader instruction manual & spares list (WHI008X).....	POA
Whitlock 505 excavator - loader - shovel instruction manual & spares list (WHI006X).....	POA
Whitlock 605 excavator - loader - shovel instruction manual & spares list (WHI005X).....	POA
Whitlock Super Major excavator spares list (WHI001).....	POA
'Dinkum' Major and Super Major power shovel instruction book (WHI002).....	POA

Wolseley

W.D. II Engine parts list for engines no. 7000 onwards, 1947 (WOL001).....	POA
W.D. 9 and W.L.B. 9 Series instruction book and spare parts list (WOL004).....	POA
Clippers instructions & parts list, covers models Clipvac, Pedigree, No.16 Horse & cattle and Princess clippers (WOL007X).....	POA
Merry Tiller Major & Professional instructions, as cultivator including vee-plex pulley and PTO attachment (WOL005X).....	POA
Merry Tiller 36" Sickle mower Model MT3757 use with Titan instructions and parts list (WOL006X).....	POA

Zenith

Instructions for Zenith carburettor as fitted to Ferguson tractors (ZE001).....	POA
---	-----

Zetor

4911, 5911, 5945, 6911 and 6945 Workshop manual (ZET003).....	POA
5011, 6011, 6045, 7011 and 7045 Tractor workshop manual (ZET006).....	POA
5211, 5245, 6211, 6245, 7211 and 7245 Tractors operators manual (ZET002).....	POA
5211, 5245, 6211, 6245, 7211 and 7245 Tractors workshop manual, does not include transmission (ZET005).....	POA
8111, 8145, 10111, 10145, 12111, 12145 and 16145 Tractors workshop manual (ZET004).....	POA

Ordering from this Catalogue

We hope that you have found something of interest to you in our latest catalogue. All instruction books, workshop manuals and parts lists are originals and thus in variable condition, please ask us for details and check for availability prior to ordering. As we are ceasing trading at the end of this year we will not be restocking any items. This list contains everything currently available from us.

UK Processing & Postage Rates

Orders up to £20 in value	£2.00 charge
Orders up to £40 in value	£3.50 charge
Orders over £40 in value	no charge

Due to semi retirement we unfortunately no longer supply customers from outside the UK.

Orders may be placed as follows:

Due to measures introduced to reduce card fraud we now require the following additional information before processing your order; the Card Issuer (the bank etc. with which you hold your card) and the Card Security Code, which is the last 3 digit number on the signature strip.

By Phone

Orders may be placed by phone on **01332 702717** using your credit or debit card (we accept Mastercard, Eurocard, Visa, and Maestro). We will require all of the information requested on our order form. Orders can only be dispatched to the card holder's address.

We are available on the phone -

Monday to Friday 9am to 6pm

Saturday 9am to 6pm if available

Sunday Not available

By Post

Orders may be placed by post using the attached order form. Payment can be by cheque, credit or debit card (we accept Mastercard, Eurocard, Visa, and Maestro / Switch). Cheques must be made payable to B.J.Sims and are only accepted for orders of £10 or over. We do not accept the old style postal orders, however we do accept the new 'cheque' style postal orders, again only for orders of £10 or over. Credit and debit card orders must be signed and can only be dispatched to the card holders' address. Please do not send cash.

Although every effort has been taken to ensure that this catalogue is correct and up to date we reserve the right to change any details contained herein without prior notice. E&OE

It is our policy never to sell or pass your name and address on to other organisations. Your details are confidential and you will never receive unsolicited mail from other parties as a result of ordering from B.J.Sims Publishing

B.J.Sims Publishing October 2018 Catalogue

Order Form

Code (i.e. FER001)	Units	Description	Unit Price	Total
Postage etc		See 'How to Order' for costs		
			Total	

Ordered by:

Telephone Number:

Ship to:

Method of Payment

- I enclose a cheque (made payable to B.J.Sims) for £.....
- Please charge my credit / debit card (we accept Eurocard, Mastercard, Visa, or Maestro) for £.....
 - Card Holders Name & Initials (as on the card)
 - Card Expiry Date/.....Card Number.....
 - Valid From Date/..... Issue Number (Maestro & Solo only).....
 - Card Security Code: Card Issuer:
 - Signed (card orders must be signed)

For new list please send 2 x second class stamps or £1.00 if order is under £20, over £20 list is free. Or download free from www.vintagefarmbooks.com